

FORD **KUGA** Quick Reference Guide



Feel the difference

The information contained in this publication was correct at the time of going to print. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2011

All rights reserved.

Part Number: CG3565en 08/2011 20110725142530


ABOUT THIS QUICK REFERENCE GUIDE

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle better by reading this Quick Reference Guide, which summarises some important aspects of your Owner's Manual. The more that you know about your vehicle, the greater the safety and pleasure you will get from driving it.

AT A GLANCE

Instrument panel overview

Left-hand drive

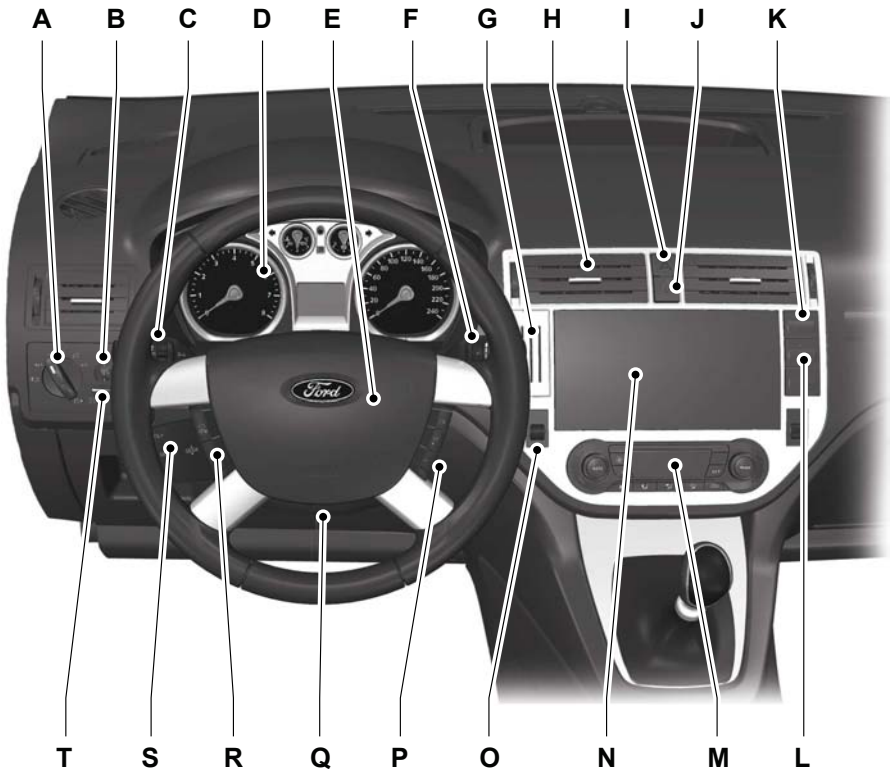

E78209


This Quick Reference Guide must be read in conjunction with the Owner's Manual.

WARNING



Always drive with due care and attention when using and operating the controls and features on your vehicle.

Right-hand drive

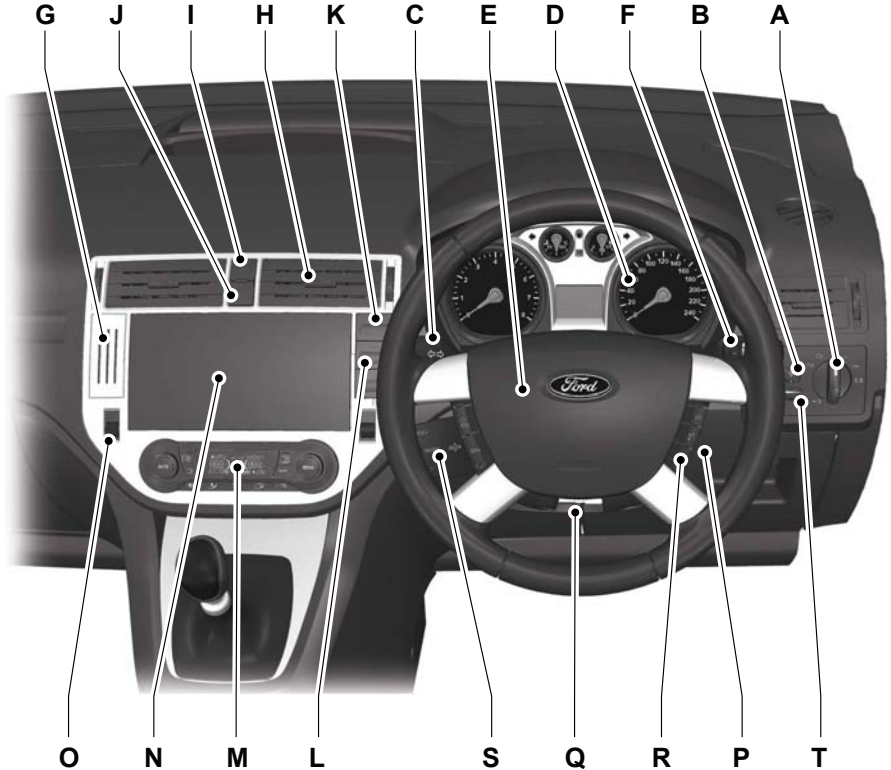

E78210

- A Lighting control. Front fog lamps. Rear fog lamp.
- B Headlamp levelling control.
- C Multi-function lever: Information display controls. Direction indicators. Main beam.
- D Instrument cluster.
- E Horn.
- F Wiper lever.
- G Card holder.
- H Air vents.
- I Hazard warning flasher switch.
- J Start button.
- K Heated windscreen switch.

- L Heated rear window switch.
- M Climate controls.
- N Audio or navigation unit.
- O Heated front seat switch.
- P Ignition switch.
- Q Steering wheel adjustment.
- R Cruise control switches.
- S Audio controls.
- T Instrument lighting dimmer.

LOCKING AND UNLOCKING

WARNING



For all warnings and cautions, refer to your Owner's handbook.



A



B



C

E87379

- A Unlock
- B Lock
- C Luggage compartment lid unlock


Double locking the doors with the key

Turn the key to the lock position twice within three seconds to double lock the doors.

Double locking the doors and the luggage compartment lid with the remote control

Press button **B** twice within three seconds.

Opening the luggage compartment lid

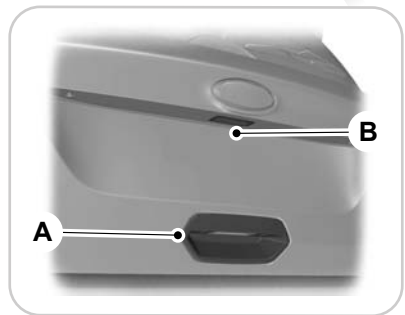

E139497

- A Main luggage compartment lid
- B Upper luggage compartment lid

Opening the main luggage compartment lid with the remote control

Press button **C** on the remote control twice within three seconds.

Opening the upper luggage compartment lid with the remote control

Press and hold button **C** on the remote control.

GLOBAL OPENING AND CLOSING

WARNING



For all warnings and cautions, refer to your Owner's handbook.

To open or close all the windows, press and hold the **lock** or the **unlock** button on the remote control for at least three seconds. Press either the **lock** or the **unlock** button again to stop the function.


DISARMING THE ALARM

The system can be deactivated at any time, even when the alarm is sounding, by unlocking the vehicle from the outside.

The system will be deactivated if:

- A valid passive key is located within the detection range.
- The unlock button on the remote control is pressed.
- A valid passive key is located within the vehicle interior and you depress the clutch pedal (manual transmission) or brake pedal (automatic transmission).
- You insert the key blade into the key holder.


WINDSCREEN WIPERS

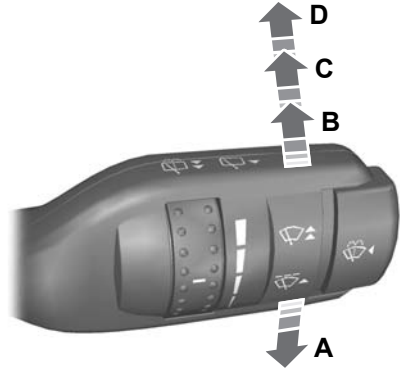

E71012

- A Single wipe
- B Intermittent wipe or autowipers
- C Normal wipe
- D High speed wipe

Intermittent wipe

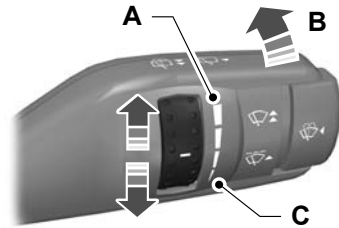


E71013

- A Long wipe interval
- B Intermittent wipe
- C Short wipe interval

REAR WINDOW WIPER AND WASHERS

WARNING

 For all warnings and cautions, refer to your Owner's handbook.

Intermittent wipe




E71017


Pull the lever towards the steering wheel.

CHANGING THE WIPER BLADES

Windscreen wiper blades

WARNINGS


 Set the windscreen wipers in the service position to change the wiper blades.

 You can use the service position in winter to provide easier access to the wiper blades for freeing them from snow and ice. The windscreen wipers will return to their normal position as soon as you switch on the ignition so make sure that the outside of the windscreen is free from snow and ice before you switch on the ignition.

Service position



E85833

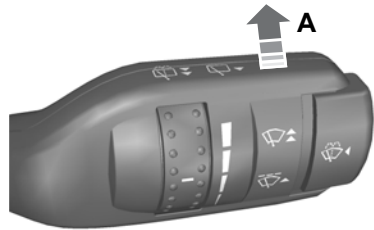


E99280

1. Turn on the ignition.
2. Move the wiper lever to position **A** and turn the ignition off as soon as the wiper blades have reached the service position.

AUTOLAMPS

WARNING

 In severe weather conditions, it may be necessary to switch your headlamps on manually.

Note: If you have switched autolamps on, you can only switch the main beam on when autolamps has switched the headlamps on.



E73840

The headlamps will come on and go off automatically depending on the ambient light.

POWER WINDOWS

WARNING



For all warnings and cautions, refer to your Owner's handbook.

To reduce wind noise or buffeting when just one window is open, open the opposite window slightly.

INFORMATION DISPLAYS


WARNING



For all warnings and cautions, refer to your Owner's handbook.

Various systems on your vehicle can be controlled using the multi-function lever on the steering column. Corresponding information is displayed in the information display.

Controls

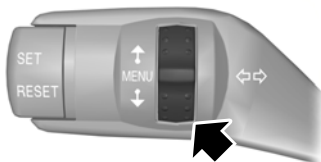

E73265

Use the rotary control:

- to scroll through the trip computer displays
- to scroll through and highlight the options within a menu.



E73266

Press the **SET/RESET** button to:

- enter the main menu from the trip computer displays
- enter a sub-menu
- exit a menu
- choose and confirm a setting.

TRIP COMPUTER

Distance to empty

Indicates the approximate distance the vehicle will travel on the fuel remaining in the tank. Changes in driving pattern may cause the value to vary.

MANUAL CLIMATE CONTROL

Cooling the interior quickly



E71381

Heating the interior quickly



E71377

Recommended settings for cooling



E131534

Open the centre and side air vents.

Direct the centre air vents upwards and the side air vents toward the side windows.

Recommended settings for heating



E131535

Close the centre air vents and open the side air vents.

Direct the side air vents toward the side windows.

Defrosting and demisting the windscreen




E71382

When the temperature is above 4°C (39°F), the air conditioning will switch on automatically. Make sure that the blower is on. The indicator in the switch will illuminate during defrosting and demisting.

If you move the air distribution control to a position other than windscreen, the **A/C** will remain on.

You can switch the air conditioning and recirculated air on and off while the air distribution control is set to windscreen.

AUTOMATIC CLIMATE CONTROL

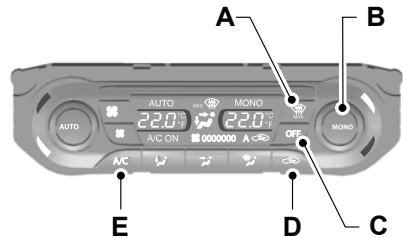

E78730

- A Windscreen defrosting and demisting
- B Toggle mono mode on and off
- C Air conditioning OFF
- D Recirculated air
- E Air conditioning ON

Recommended settings: AUTO, 22°C (72°F).

Mono mode

In mono mode, the temperature settings for both the driver's and passenger's side are linked. If you adjust the temperature using the rotary control on the driver's side, the settings will be adjusted to the same setting on the passenger's side.

HEATED WINDOWS AND MIRRORS

Heated windows

Use the heated windows to defrost or demist the windscreen or rear window.

Note: *The heated windows operate only when the engine is running.*

Heated windscreen



Heated rear window



Heated exterior mirrors


Electric exterior mirrors are fitted with a heating element that will defrost or demist the mirror glass. They will switch on automatically when you switch the heated rear window on.

HEAD RESTRAINTS

WARNING



For all warnings and cautions, refer to your Owner's handbook.

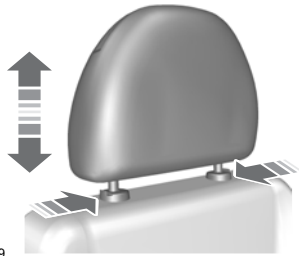

E66539

Adjust the head restraint so that the top of it is level with the top of your head.


MANUAL SEATS

WARNING




For all warnings and cautions, refer to your Owner's handbook.

Moving the seats forwards or backwards

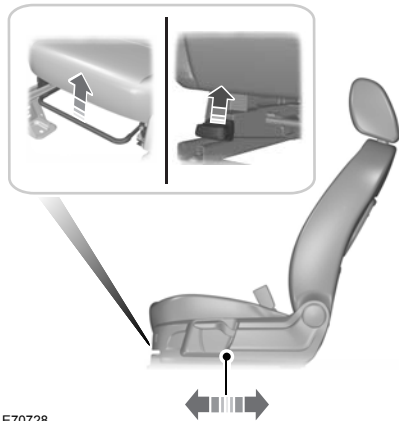


E70728

Adjusting the height of the driver's seat

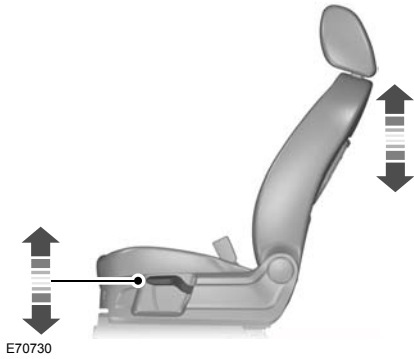


Adjusting the angle of the seatback

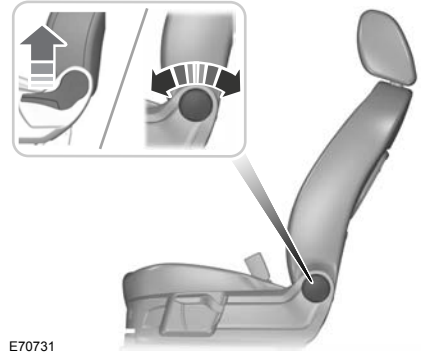


POWER SEATS

6-way electric seat

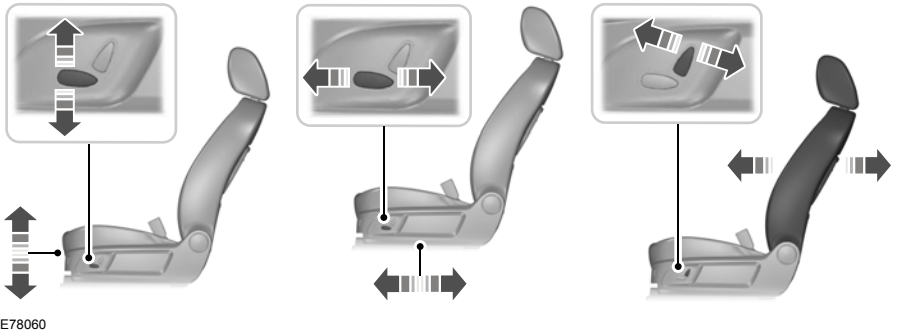

INSTRUMENT LIGHTING DIMMER

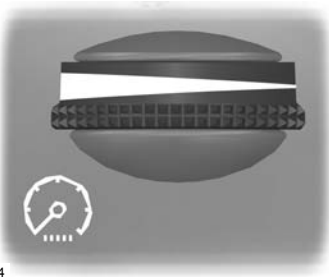

E70454


CLOCK

1. Use the rotary control to enter the main menu.
2. Highlight **Clock** and press the **SET/RESET** button.
3. Highlight **Set Clock** and press the **SET/RESET** button. The hours start to flash.
4. Use the rotary control to adjust the hours to the desired setting.
5. Press the **SET/RESET** button to confirm the setting. The minutes start to flash.
6. Proceed in the same way to set the minutes and the date.

KEYLESS STARTING

Failure to start


If you are unable to start your vehicle carry out the following procedure.

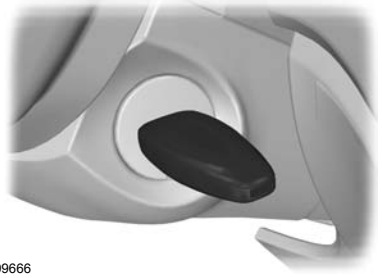

E99666


1. Hold the key next to the steering column shroud exactly as shown.
2. With the key in this position you can use the start button to switch the ignition on and start your vehicle.

If you are still unable to start your vehicle carry out the following procedure.

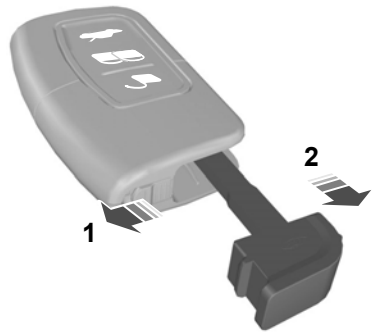


E78284

1. Slide the release slider in the direction of the arrow and pull out the key blade with your thumb.
2. Remove the key blade and insert it into the lock.

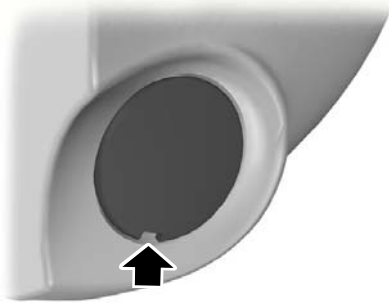

E87381

3. Carefully prise out the cover.

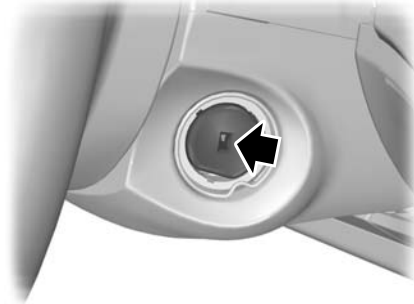

E99586

4. Insert the key blade into the key holder.
5. With the key blade in this position you can use the start button to switch the ignition on and start your vehicle.

DIESEL PARTICULATE FILTER

During regeneration at low speed or engine idle, you may smell a hot metallic odour and could notice a clicking metallic sound. This is due to the high temperatures reached during regeneration and is normal.

SWITCHING OFF THE ENGINE

WARNINGS



For all warnings and cautions, refer to your Owner's handbook.

WARNINGS




When you switch your engine off, the cooling system fans may run on for several minutes, even if the ignition is switched off. The fans may also start running again after some time if the coolant temperature rises due to a build-up of heat. Take care not to get any fingers or clothing such as ties or scarves caught in the fan.

FUEL FILLER FLAP

WARNING





For all warnings and cautions, refer to your Owner's Manual.

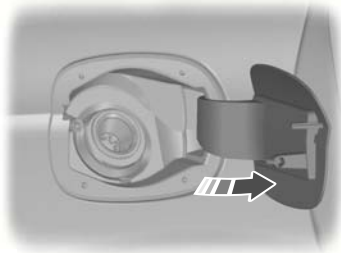

E86613

Press the flap to open it. Open the flap fully until it engages.

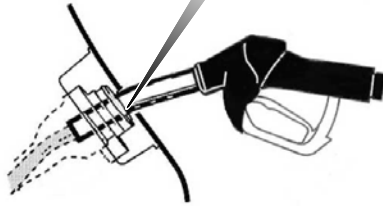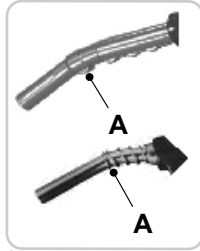


E139202

Insert the fuel nozzle up to and including the first notch on the nozzle **A**. Keep it resting on the cover of the fuel pipe opening.

WARNING



We recommend that you remove the fuel nozzle slowly to allow any residual fuel to drain into the fuel tank. Alternatively you can wait 10 seconds before removing the fuel nozzle.

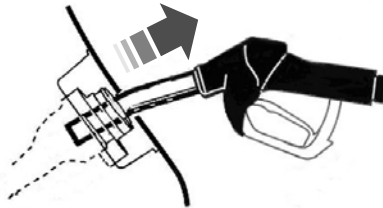

E119081

Slightly raise the fuel nozzle to remove it.

HINTS ON DRIVING WITH ANTI-LOCK BRAKES

When the ABS is operating, the brake pedal will pulse. This is normal. Maintain pressure on the brake pedal.

The ABS will not eliminate the dangers inherent when:

- you drive too close to the vehicle in front of you.
- the vehicle is aquaplaning.
- you take corners too fast.
- the road surface is poor.

CRUISE CONTROL

WARNING



For all warnings and cautions, refer to your Owner's handbook.

Cruise control allows you to control your speed using the switches on the steering wheel. You can use cruise control when you exceed approximately 30 km/h (20 mph).

ECONOMICAL DRIVING

Gear shifting

Using the highest drivable gear appropriate for the road conditions will improve fuel consumption.

Anticipation

Adjusting your vehicle speed and the distance to other vehicles without the need for heavy braking or acceleration will improve fuel consumption.

Efficient speed

Higher speeds use more fuel. Reducing your cruising speed on open roads will improve fuel consumption.

BLUETOOTH SETUP

The Bluetooth mobile phone part of the system provides interaction with the audio system and your mobile phone. It allows you to use the audio system to make and receive calls without having to hold your mobile phone.

During bonding, if your mobile phone asks you to authorize the automatic connection, select **YES**.

Refer to your Owner's Manual and also www.ford-mobile-connectivity.com for details.